 


AEROKLAS

AEROKLAS


**INSTALLATION MANUAL CANOPY
ISUZU D-MAX MY2024+**

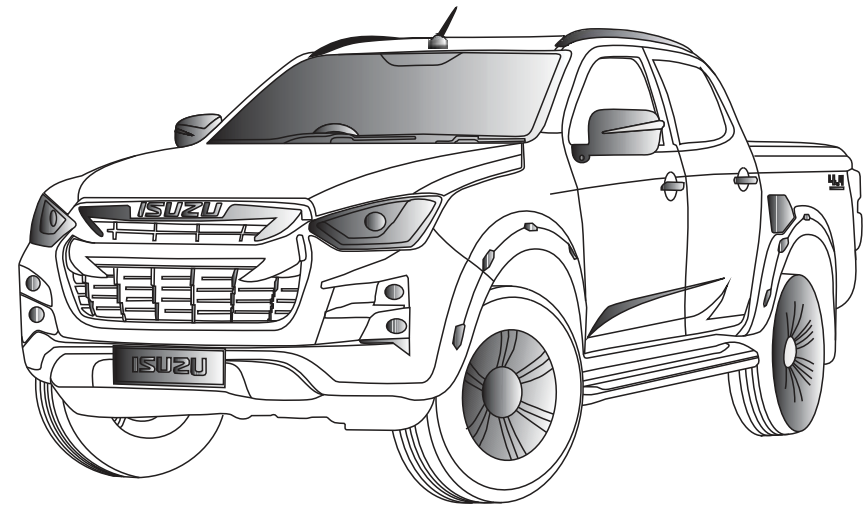



AEROKLAS CO., LTD.

62 Soi Bangna-Trad 25, Bangna-Trad Rd. Bangna, Bangkok 10260 THAILAND.
Tel: (662) 7443020 Direct Line: (662) 7443034-5 Fax: (662) 7443033
www.aeroklas.com E-mail: webinfo@aeroklas.com

9

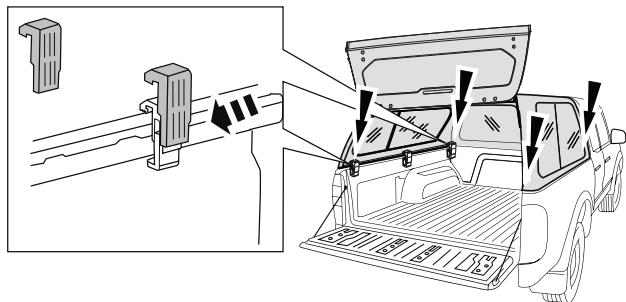

10

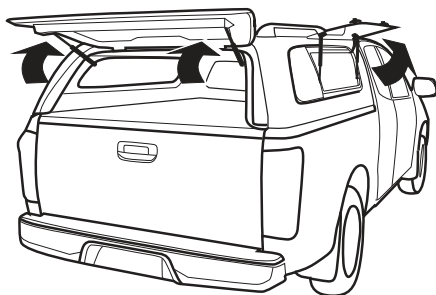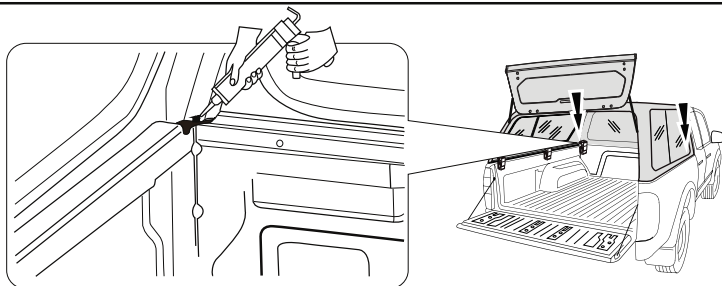


Do not open win


WARNINGS!

		WARNING Do not drive the vehicle at speed with the tailgate opened.			WARNING Heated rear screen should be turned off after defrosting. Not for extended use.
5000 Km 3000 Miles	5 mm 6 Nm		5000 Km 3000 Miles		



STYLISH

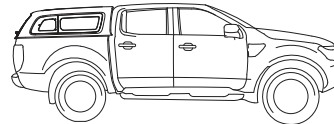

COMMERCIAL

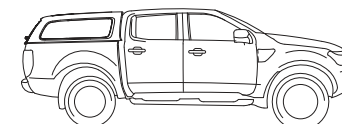

D/C

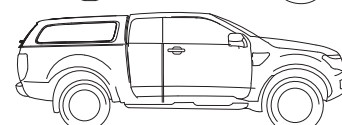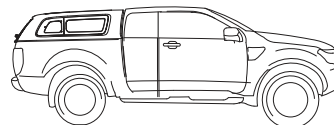

SP/C



X4




X6



X6 (OPTIONAL)



X3

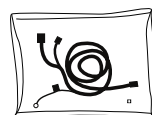

X1



X1

(OPTIONAL FOR DEMISTER)



X1

(OPTIONAL FOR RKE)

SPECIAL TOOLS





No.10,12





No.5




42 mm.

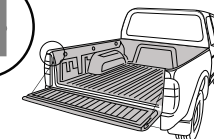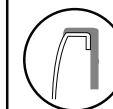

1-10

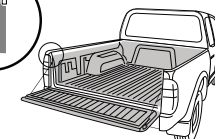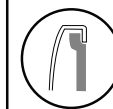


1-10


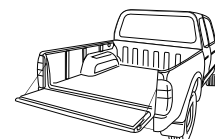


1-10


1

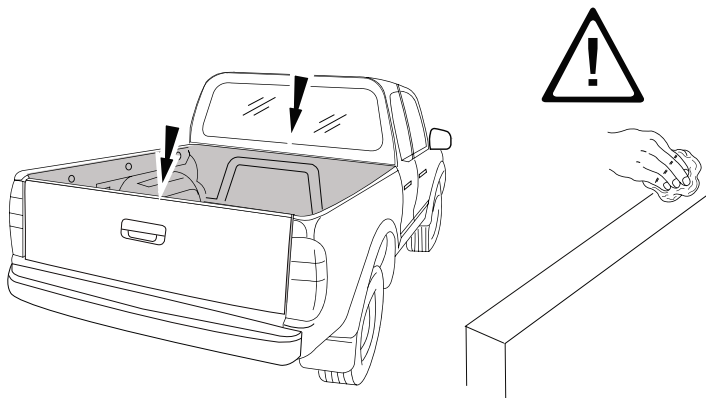

 

 

2


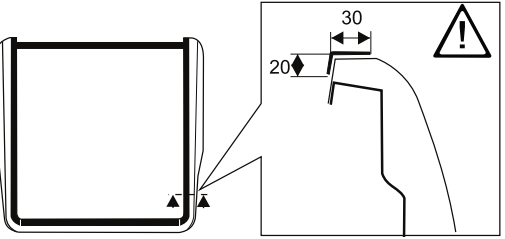
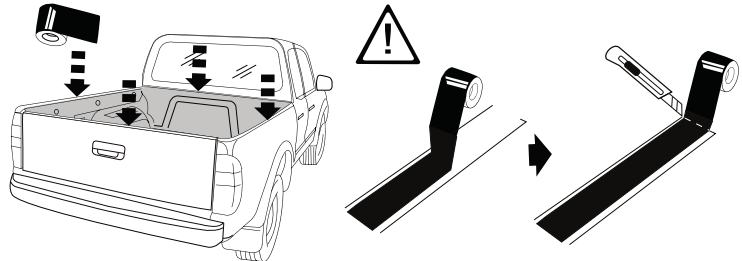


3


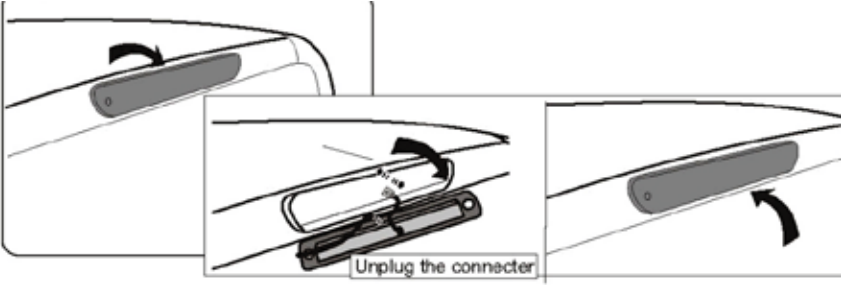


7


		B	C	D
 x 6		150	540	540
 x 6		160	690	690

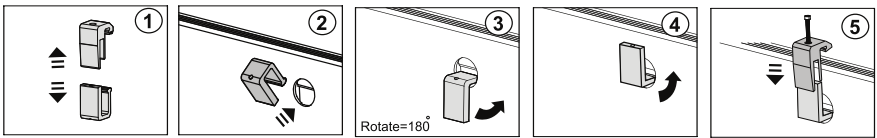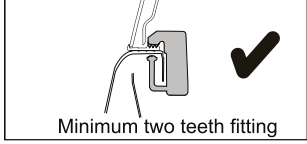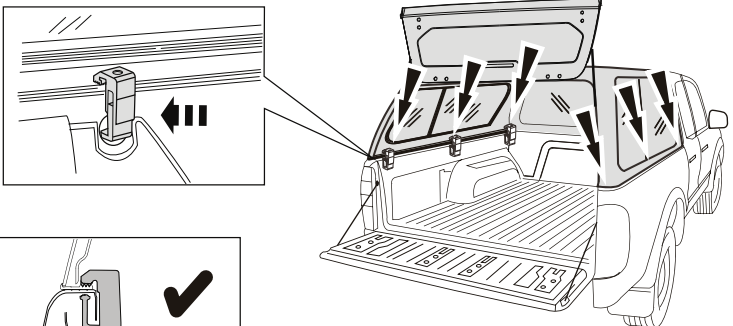


8

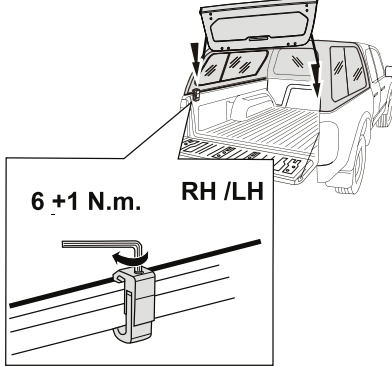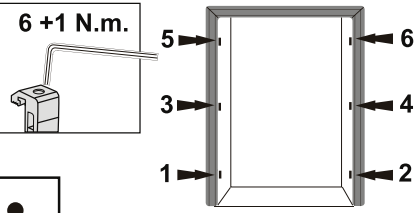




 
6.1

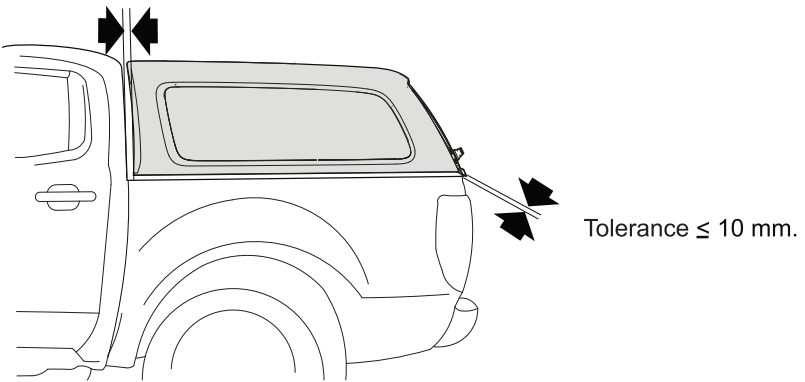



6.2

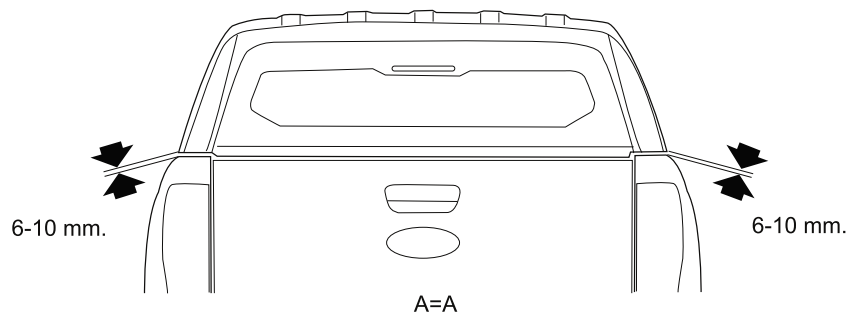

4

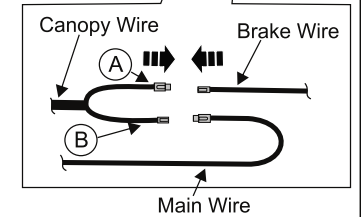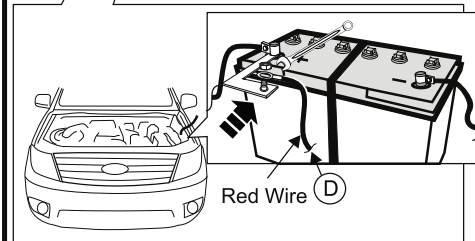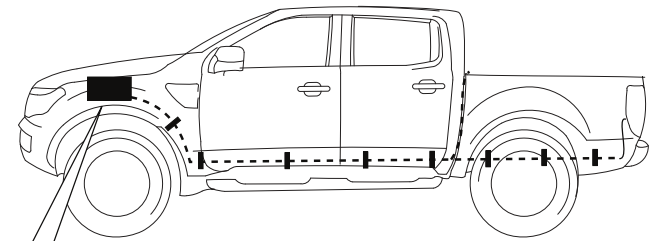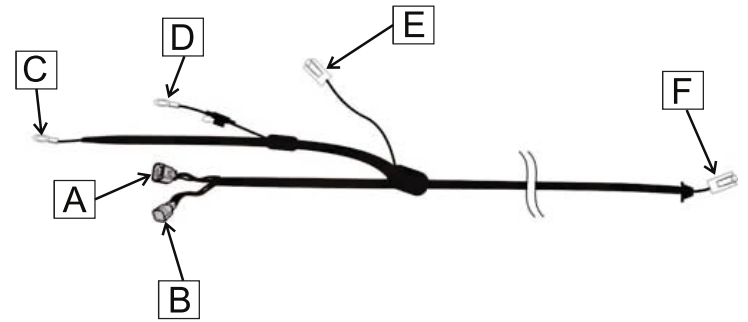


4.1

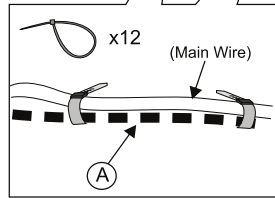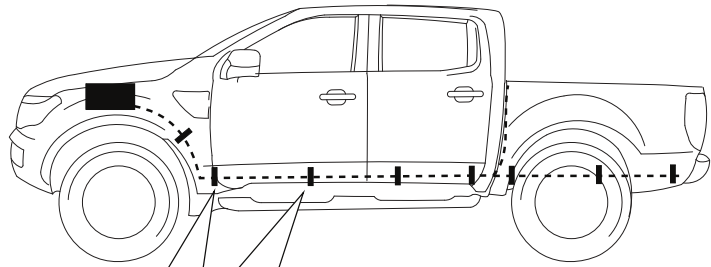

----- = (A)
 _____ = (Main Wire)




4.2 OPTIONAL FOR DEMISTOR

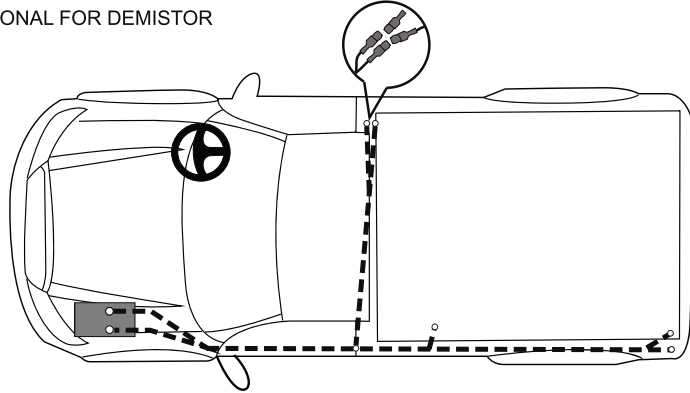


104000000085

4/9

5

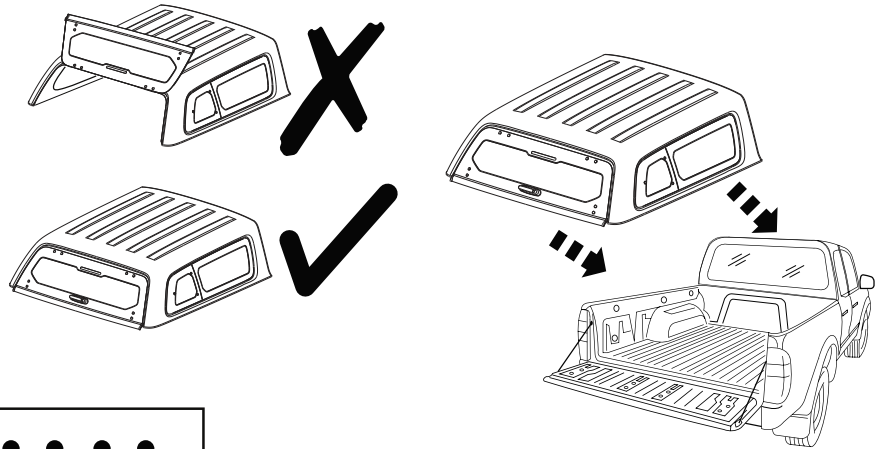

6

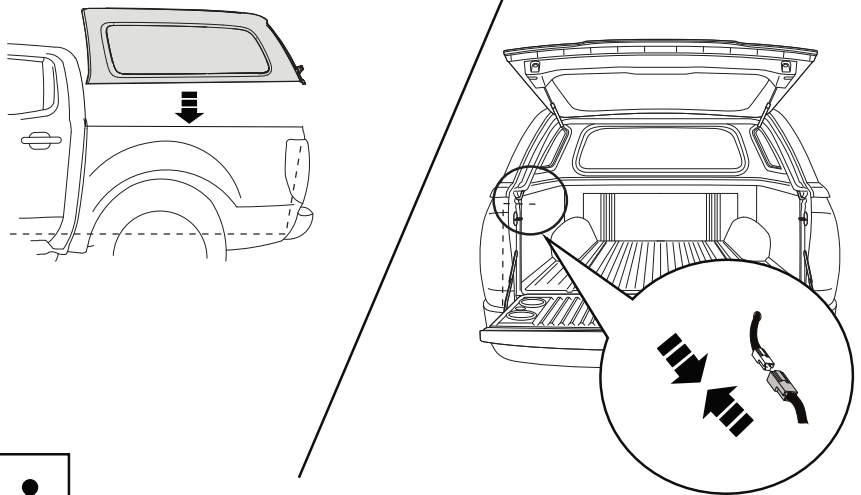


104000000085


5/9

Wiring diagram for ISUZU d-max all new

Power electric wires

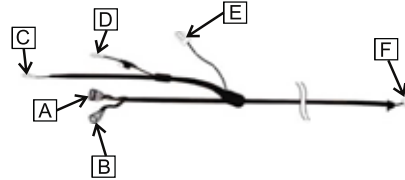


Demister (Optional)

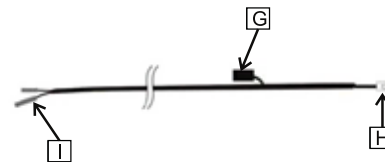

Point	Photo	Function	Referencemaual
A		Connect to Rear tail lamp	
B		Connect to Battery anode	
C		Connect to Battery cathode	
D		Connect to Battery anode	
E		Connect to Demister(H) (Optional)	
F		Connect to canopy	
G		Relay & Fuse	
H		Connect to power Electricwires(E)	
I		Connect to Vehiclerrear glass demister	

AEROKLAS

**Remote Keyless Entry CANOPY
ISUZU D-MAX ALL NEW 2020**

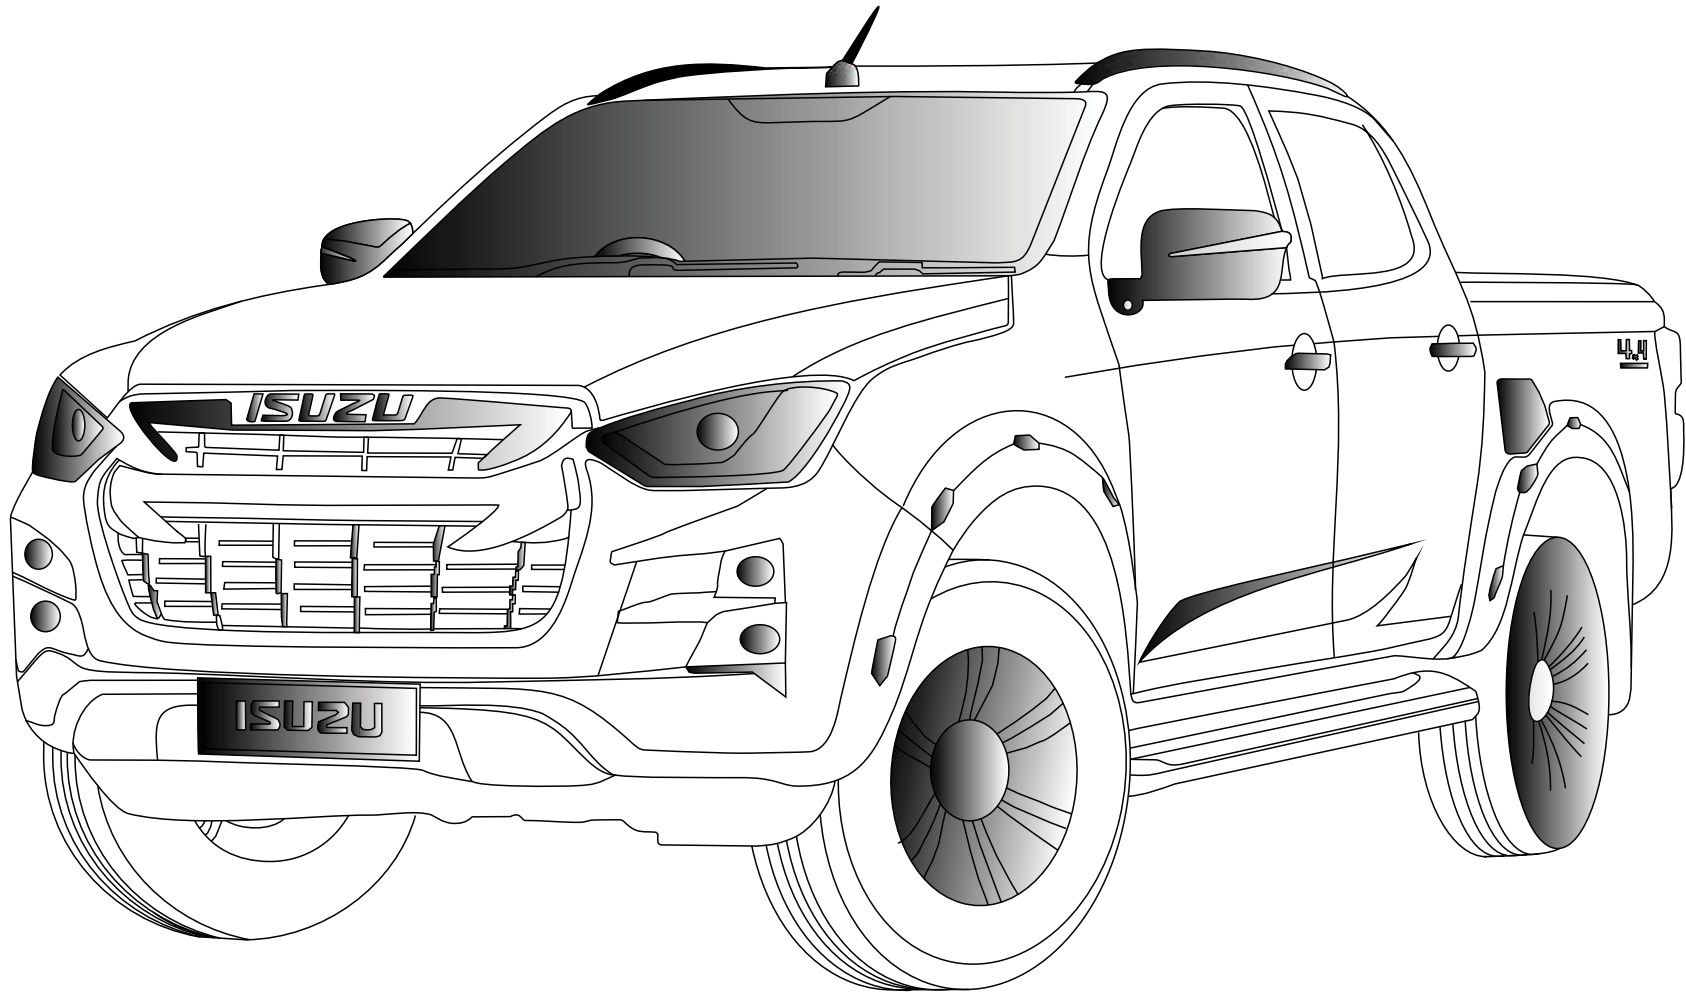


Important



Always refer to the vehicle's Workshop Manual when removing vehicle components.

- Note down all clock and radio settings.
- In the engine bay, disconnect the negative battery terminal (1).

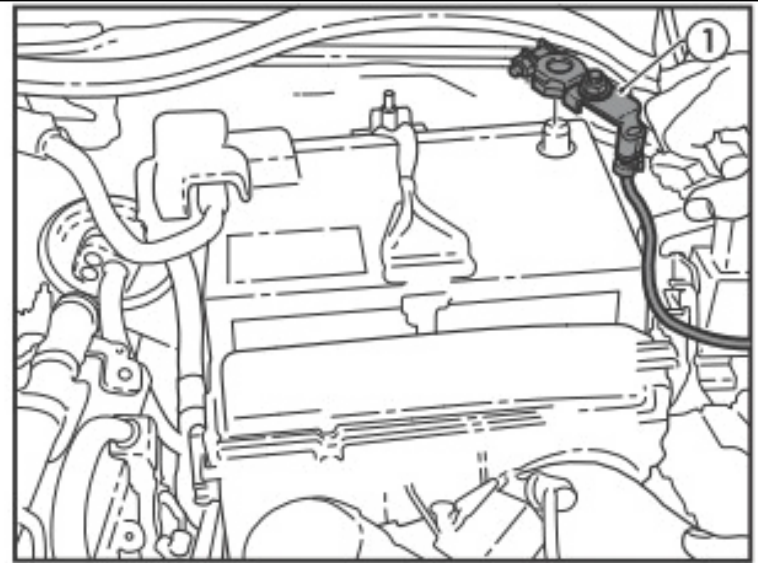

On RG-01 D-MAX, remove the LHS kick panel under the glove box.

Locate LHS door inline connector as shown


2 Remove the mounting bolt on the connector interface



1 Remove the connector leaver lock & disconnect from the interface.

Once disconnected, turn over the connector interface to access the required circuits.

Locate the **White** wire (top corner cavity) on the green connector for door “UNLOCK” signal. Using the scotch lock on the RKE cabin Harness, connect “UNLOCK” (**GN/BK** wire) as shown.

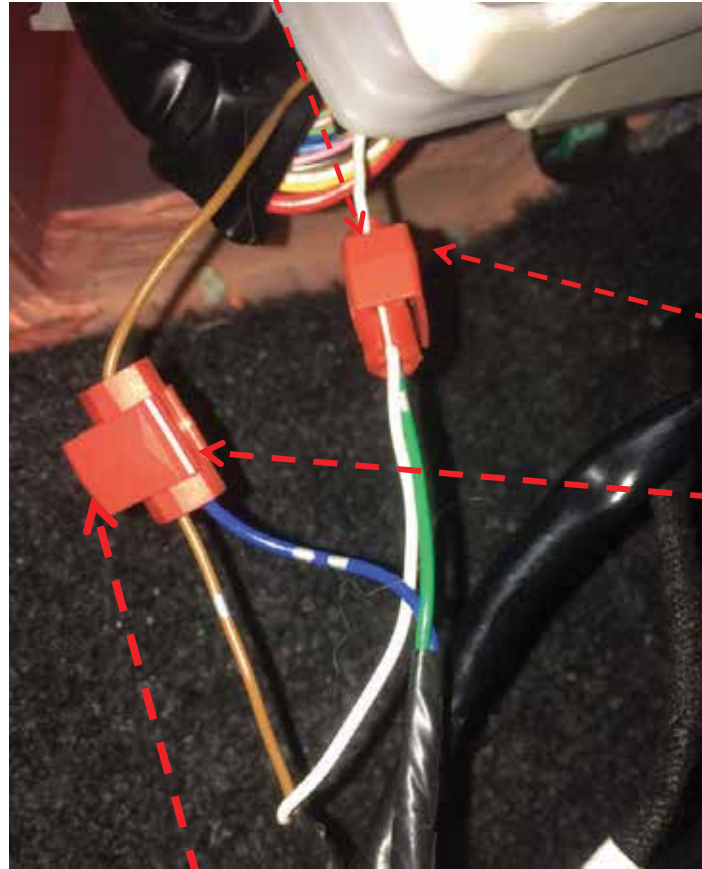

Locate the **Brown** wire (bottom corner cavity) on the green connector for door “LOCK” signal. Using the scotch lock on the RKE cabin Harness, connect “LOCK” (**BL/BK** wire) as shown.